

# **Nokia 6303 classic User Guide**

### Contents

#### Safety 5

#### Start up 6

Keys and parts	6
Install SIM card and battery	6
Insert and remove the memory card	7
Charge the battery	7
Antenna	8
Accessories	8
Connect a USB cable	8
Headset	8
Strap	9

#### Switch it on 9

About your device	9
Network services	10
Access codes	10
Switch the phone on and off	10
Standby mode	11
Display	11
Home screen	11
Shortcuts	11
Indicators	12
Navigate the menus	12
Keypad lock	12
Functions without a SIM card	12
Flight mode	12

#### Make it your phone 13

Basic settings	13
Phone	13
Security	14
Personalise your phone	14
Profiles	14
Themes	14
Tones	15
Lights	15
Display	15
My shortcuts	15
Left and right selection keys	15

Other shortcuts	15
Assign dialling shortcuts	15
Voice commands	16
Connect	16
Bluetooth wireless technology	16
Packet data	17
USB data cable	17
Synchronisation and backup	17
Connect a USB device	18
Network provider services	18
Operator menu	18
SIM services	18
Position log	18
Info messages, SIM messages, and service commands	18
Configuration	19

#### Stay in touch 19

Make calls	19
Make a voice call	19
Dialling shortcuts	20
Voice dialling	20
Options during a call	20
Voice messages	20
Call log	20
Call	21
Text and messages	21
Write text	21
Text modes	21
Traditional text input	21
Predictive text input	21
Text and multimedia messages	22
Text messages	22
Multimedia messages	22
Create a text or multimedia message	22
Read a message and reply	23
Send and organise messages	23
Flash messages	23
Instant messaging	23
Nokia Xpress audio messages	23
Message settings	24
E-mail	24
E-mail setup wizard	24

Write and send an e-mail	24	Date and time	35
Read an e-mail and reply	24	Alarm clock	35
New e-mail notifications	25	Calendar	35
<b>Image and video</b>	<b>25</b>	To-do list	35
Capture an image	25	Notes	35
Record a video clip	25	Nokia PC Suite	36
Camera and video options	26	Calculator	36
Gallery	26	Countdown timer	36
Folders and files	26	Stopwatch	36
Print images	26	<b>Support and updates</b>	<b>37</b>
Share images and videos online	26	Helpful hints	37
Memory card	26	Nokia support	37
<b>Entertainment</b>	<b>27</b>	My Nokia	37
Listen to music	27	Download content	37
Media player	27	Update device software	38
Music menu	27	Software updates over the air	38
Play songs	28	Configuration setting service	39
Change the media player look	28	Restore factory settings	39
Radio	28	<b>Accessories</b>	<b>40</b>
Tune radio stations	29	<b>Battery</b>	<b>40</b>
Radio settings	29	Battery and charger information	40
Voice recorder	29	Nokia battery authentication guidelines	40
Equaliser	29	Authenticate hologram	40
Stereo widening	30	What if your battery is not authentic?	41
Web	30	<b>Care and maintenance</b>	<b>41</b>
Connect to a service	30	Recycle	41
Web uploads	30	<b>Additional safety information</b>	<b>41</b>
Appearance settings	30	Small children	41
Cache memory	31	Operating environment	41
Browser security	31	Medical devices	42
Games and applications	31	Implanted medical devices	42
Launch an application	31	Hearing aids	42
Download an application	32	Vehicles	42
<b>Maps</b>	<b>32</b>	Potentially explosive environments	42
Download maps	32	Emergency calls	42
Maps and GPS	33	Certification information (SAR)	43
Extra services	33		
<b>Organise</b>	<b>34</b>		
Manage contacts	34		
Business cards	34		



## Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

### SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

### ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

### INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

### SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

### QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

### ACCESSORIES AND BATTERIES



Use only approved accessories and batteries. Do not connect incompatible products.

### WATER-RESISTANCE

 



Your device is not water-resistant. Keep it dry.


## Start up

Get to know your phone, insert the battery, SIM card, and memory card, and learn some important information about your phone.

### Keys and parts

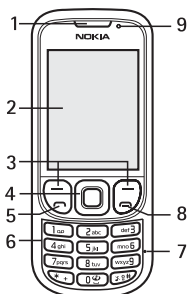

- 1 Earpiece
- 2 Display
- 3 Left and right selection key
- 4 Navi™ key (scroll key)
- 5 Call key
- 6 Keypad
- 7 Microphone
- 8 End key
- 9 Light sensor
- 10 Charger connector
- 11 Wrist strap eyelet
- 12 Nokia AV Connector (3.5 mm)
- 13 Micro USB cable connector

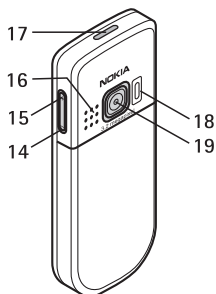

- 14 Volume down key
- 15 Volume up key
- 16 Loudspeaker
- 17 Power key
- 18 Camera flash
- 19 Camera lens


### Install SIM card and battery

Always switch the device off and disconnect the charger before removing the battery.


This phone is intended for use with a BL-5CT battery. Always use original Nokia batteries. See "[Nokia battery authentication guidelines](#)", p. 40.

The SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


- 1 Slide the cover (1), and remove it. Remove the battery (2).

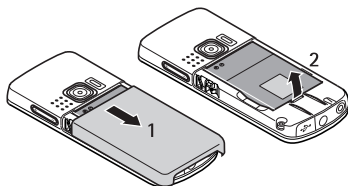

- 2 Open the SIM card holder (3). Insert the SIM card into the holder with the contact surface facing down (4). Close the SIM card holder (5).

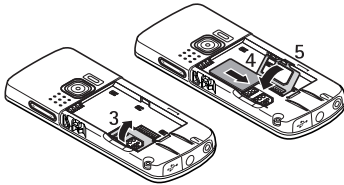

- 3 Observe the battery contacts (6), and insert the battery (7). Replace the back cover (8).

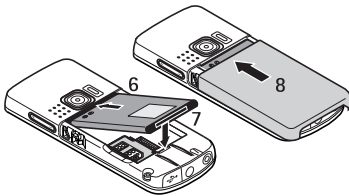


### Insert and remove the memory card

Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your phone supports microSD cards of up to 4 GB.

### Insert the memory card

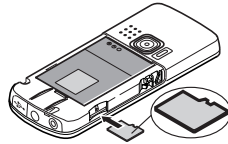

- 1 Remove the back cover.
- 2 Insert the card into the memory card slot with the contact surface facing down, and press until it locks into place.
- 3 Replace the back cover.

### Remove the memory card

**Important:** Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

You can remove or replace the memory card during phone operation without switching the device off.


- 1 Ensure that no application is currently accessing the memory card.
- 2 Remove the back cover.
- 3 Press the memory card slightly in to release the lock, and remove it.
- 4 Replace the back cover.

### Charge the battery

Your battery has been precharged, but the charging levels may vary.

- 1 Connect the charger to a wall outlet.

## 8 Start up

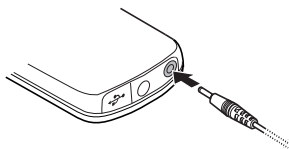

- 2 Connect the charger to the device.
- 3 When the battery is fully charged, disconnect the charger from the device, then from the wall outlet.

If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

The charging time depends on the charger used. Charging a BL-5CT battery with the AC-8 charger takes approximately 1 hour 30 minutes while the phone is in the home screen mode.

### Antenna




Your device may have internal and external antennas. As with any radio transmitting device, avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with such an antenna affects the communication quality and may cause the device to operate at a higher power level

than otherwise needed and may reduce the battery life.

The figure shows the antenna area marked in grey.

### Accessories

#### Connect a USB cable

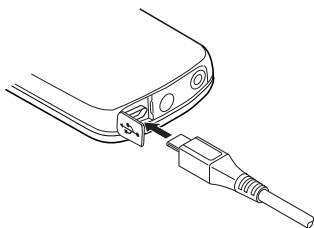

Open the cover of the USB connector, and connect the USB cable to the device.

### Headset

#### Warning:

Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

#### Warning:


When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels.

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

### Strap

- 1 Remove the back cover.
- 2 Attach a strap, and tighten it.
- 3 Replace the back cover.

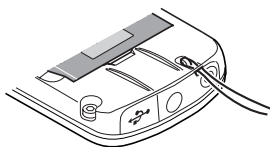

## Switch it on

Learn how to switch on your phone, and how to use the basic functions.

### About your device

The wireless device described in this guide is approved for use on the GSM 900, 1800, and 1900 MHz networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Your device may have preinstalled bookmarks and links for third-party internet sites. You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you choose to access such sites, you should take precautions for security or content.

### Warning:

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Remember to make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

## 10 Switch it on

Remember to make back-up copies or keep a written record of all important information stored in your device.

Refer to the user guide for other important information about your device.

### Network services

To use the device you must have service from a wireless service provider. Many of the features require special network features. These features are not available on all networks; other networks may require that you make specific arrangements with your service provider before you can use the network services. Using network services involves transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can give you instructions and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

### Access codes

To set how your phone uses the access codes and security settings, select **Menu > Settings > Security > Access codes**.

- The security code helps to protect your phone against unauthorised use. The preset code is 12345. You can

change the code and set the phone to request the code. Some operations require the security code regardless of the settings, for example if you want to restore the factory settings. Keep the code secret and in a safe place separate from your phone. If you forget the code and your phone is locked, your phone will require service and additional charges may apply. For more information, contact a Nokia Care point or your phone dealer.

- The PIN (UPIN) code, supplied with the SIM (USIM) card, helps to protect the card against unauthorised use.
- The PIN2 (UPIN2) code, supplied with some SIM (USIM) cards, is required to access certain services.
- PUK (UPUK) and PUK2 (UPUK2) codes may be supplied with the SIM (USIM) card. If you enter the PIN code incorrectly three times in succession, you are asked for the PUK code. If the codes are not supplied, contact your service provider.
- The barring password is required when using the call barring service to restrict calls to and from your phone (network service).
- To view or change the security module settings for the browser, select **Menu > Settings > Security > Security module sett..**

### Switch the phone on and off

To switch the phone on or off, press and hold the power key.

If the phone prompts for a PIN code, enter the code (displayed as \*\*\*\*).

If the phone prompts you for the time and date, enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich


Mean Time (GMT), and enter the date. See ["Date and time"](#), p. 35.


When you switch on your phone for the first time, you may be prompted to get the configuration settings from your service provider (network service). For more information, refer to **Connect to support**. See ["Configuration"](#), p. 19, and ["Configuration setting service"](#), p. 39.

### Standby mode

When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

### Display

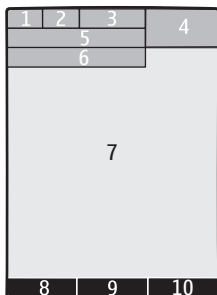

- 1 Signal strength of the cellular network 
- 2 Battery charge status
- 3 Indicators
- 4 Clock
- 5 Name of the network or the operator logo
- 6 Date
- 7 Display
- 8 Function of the left selection key
- 9 Function of the Navi key; hereafter referred to as scroll key
- 10 Function of the right selection key

You may change the function of the left and right selection key. See ["Left and right selection keys"](#), p. 15.

### Home screen

The home screen mode displays a list of selected phone features and information that you can directly access.

Select **Menu > Settings > Display > Home screen**.

To activate the home screen mode, select **Home screen mode**.

To organise and change the home screen mode, select **Personalise view**.

To select the key that is used to activate the home screen mode, select **Home screen key**.

Depending on the setting, in the home screen mode, scroll up or down to navigate in the list, and select **Select**, **View**, or **Edit**. The arrows indicate that further information is available. To stop navigating, select **Exit**.

### Shortcuts

When your device is in the standby or home screen mode, you can use the following shortcuts.

#### List missed, received, and dialled calls

Press the call key. To make a call, scroll to the number or name, and press the call key.

#### Start the web browser

Press and hold **0**.

#### Call the voice mailbox



 










Press and hold **1**.

#### Use other keys as shortcuts

 See ["Dialling shortcuts"](#), p. 20.

## 12 Switch it on

### Indicators

-  You have unread messages.
-  You have unsent, cancelled, or failed messages.
-  The keypad is locked.
-  The phone does not ring for incoming calls or text messages.
-  An alarm is set.
-  The phone is registered to the GPRS or EGPRS network.
-  The phone has an open GPRS or EGPRS connection.
-  The GPRS or EGPRS connection is suspended (on hold).
-  Bluetooth connectivity is turned on.
-  If you have two phone lines, the second phone line is selected.
-  All incoming calls are diverted to another number.
-  Calls are limited to a closed user group.
-  The currently active profile is timed.

### Navigate the menus

The phone offers you an extensive range of functions that are grouped into menus.

- 1 To access the menu, select **Menu**.
- 2 Scroll through the menu, and select an option (for example, **Settings**).
- 3 If the selected menu contains further submenus, select one (for example, **Call**).
- 4 Select the setting of your choice.
- 5 To return to the previous menu level, select **Back**.  
To exit the menu, select **Exit**.

To change the menu view, select **Options > Main menu view**. Scroll right, and select from the available options.

To rearrange the menu, select **Options > Organise**. Scroll to the menu item to be moved, and select **Move**. Scroll to where you want to move the menu item, and select **OK**. To save the change, select **Done > Yes**.

### Keypad lock

To lock the keypad to prevent accidental keypresses, select **Menu**, and press \* within 3.5 seconds.

To unlock the keypad, select **Unlock**, and press \* within 1.5 seconds. If requested, enter the lock code.

To answer a call when the keypad is locked, press the call key. When you end or reject the call, the keypad locks automatically.

 
Further features are automatic keyguard and security keyguard. [See "Phone", p. 13.](#)

When the device or keypad is locked, calls may be possible to the official emergency number programmed into your device.

### Functions without a SIM card

Some functions of your phone may be used without inserting a SIM card, such as **Organiser** functions and games. Some functions appear dimmed in the menus and cannot be used.

### Flight mode

Use **flight mode** in radio sensitive environments — on board aircraft or in hospitals — to deactivate all radio frequency functions. You still have access to offline games, the calendar, and phone numbers. When **flight mode** is active,  is displayed.

To activate or set up flight mode, select **Menu > Settings > Profiles > Flight > Activate or Personalise**.

To deactivate flight mode, select any other profile.

### Warning:

With the flight profile you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make calls, you must first activate the phone function by changing profiles. If the device has been locked, enter the lock code.

If you need to make an emergency call while the device is locked and in the flight profile, you may be also able to enter an official emergency number programmed in your device in the lock code field and select 'Call'. The device will confirm that you are about to exit flight profile to start an emergency call.

## Make it your phone

Set up your phone, personalise it, and connect it in several ways.

### Basic settings

#### Phone

Select **Menu > Settings > Phone** and from the following:

**Language settings** — to set the language of your phone, select **Phone language** and a language. To set the language of your phone according to the information on the SIM card, select **Phone language > Automatic**.

**Memory status** — to check the memory consumption

**Automatic keypadguard** — to lock the keypad automatically after a preset time delay when the phone is in the home screen mode and no function has been used

**Security keypadguard** — to ask for the security code when you unlock the keypadguard

**Voice recognition** — [See "Voice commands", p. 16.](#)

**Flight query** — to be asked whether to use the flight mode when you switch the phone on. With flight mode, all radio connections are switched off.

**Phone updates** — to receive software updates from your service provider (network service). The available options may vary. [See "Software updates over the air", p. 38.](#)

**Operator selection** — to set a cellular network available in your area

**Help text activation** — to set the phone to show help texts

**Start-up tone** — to play a tone when you switch the phone on

## 14 Make it your phone

---

**Confirm SIM actions** — (network service)  
[See "SIM services", p. 18.](#)

### Security

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device.

Select **Menu > Settings > Security** and from the following:

**PIN code request** or **UPIN code request** — to request for your PIN or UPIN code every time the phone is switched on. Some SIM cards do not allow the code request to be turned off.

**Call barring service** — to restrict incoming calls to and outgoing calls from your phone (network service). A barring password is required.

**Fixed dialling** — to restrict your outgoing calls to selected phone numbers if supported by your SIM card. When the fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number must be included in the fixed dialling list.

**Closed user group** — to specify a group of people whom you can call and who can call you (network service)

**Security level** — to request the security code whenever a new SIM card is inserted into the phone, select **Phone**.

**Access codes** — to change the security code, PIN code, UPIN code, PIN2 code, or barring password

**PIN2 code request** — to select whether the PIN2 code is required when using a specific phone feature which is protected by the PIN2 code. Some SIM cards do not allow the code request to be turned off.

This option may not be available depending on your SIM card. For details, contact your network operator.

**Code in use** — to select the type of PIN code

**Authority certificates** or **User certificates** — to view the list of the authority or user certificates downloaded into your phone. [See "Browser security", p. 31.](#)

**Security module sett.** — to view Secur. module details, activate **Module PIN request**, or change the module PIN and signing PIN. [See "Access codes", p. 10.](#)

### Personalise your phone

Give your phone a personal touch with ringing tones, display backgrounds, and themes. Add shortcuts for your preferred features, and attach enhancements.

### Profiles

Your phone has various setting groups called profiles, which you can customise with ringing tones for different events and environments.

Select **Menu > Settings > Profiles**, the desired profile, and from the following options:

**Activate** — to activate the selected profile

**Personalise** — to change the profile settings

**Timed** — to set the profile to be active for a certain time. When the time set for the profile expires, the previous profile that was not timed becomes active.

### Themes

A theme contains elements for personalising your phone.

Select **Menu** > **Settings** > **Themes** and from the following options:

**Select theme** — Open the **Themes** folder, and select a theme.

**Theme downloads** — Open a list of links to download more themes.

### Tones

You can change the tone settings of the selected active profile.

Select **Menu** > **Settings** > **Tones**. You can find the same settings in the **Profiles** menu.

If you select the highest ringing tone level, the ringing tone reaches its highest level after a few seconds.

### Lights

To activate or deactivate light effects associated with different phone functions, select **Menu** > **Settings** > **Lights**.

### Display

Select **Menu** > **Settings** > **Display** and from the following:

**Wallpaper** — to add a background image for the home screen mode

**Home screen** — to activate, organise, and personalise the home screen mode

**Home screen font col.** — to select the font colour for the home screen mode

**Navigation key icons** — to display the scroll key icons in the home screen mode

**Notification details** — to display details in missed call and message notifications

**Power saver** — to dim the display automatically, and to display a clock when the phone is not used for a certain length of time

**Font size** — to set the font size for messaging, contacts, and web pages

**Operator logo** — to display the operator logo

**Cell info display** — to display the cell identity, if available from the network

### My shortcuts

With personal shortcuts, you get quick access to frequently used functions of your phone.

### Left and right selection keys

To change the function assigned to the left or right selection key, select **Menu** > **Settings** > **My shortcuts** > **Left selection key** or **Right selection key**, and the desired function.

In the home screen mode, if the left selection key is **Go to**, to activate a function, select **Go to** > **Options** and from the following:

**Select options** — to add or remove a function

**Organise** — to rearrange the functions

### Other shortcuts

Select **Menu** > **Settings** > **My shortcuts** and from the following:

**Navigation key** — to assign other functions from a predefined list to the navigation key (scroll key)

**Home screen key** — to select the movement of the navigation key to activate the home screen mode

### Assign dialling shortcuts

Create shortcuts by assigning phone numbers to the number keys 2-9.

- 1 Select **Menu** > **Contacts** > **Speed dials**, and scroll to a number key.

## 16 Make it your phone

---

- 2 Select **Assign**, or, if a number has already been assigned to the key, select **Options > Change**.
- 3 Enter a number or search for a contact.


### Voice commands

You can use voice commands to make phone calls, launch applications, and activate profiles.

Select **Menu > Settings > Phone**.

Voice commands are language-dependent. To set the language, select **Language settings > Phone language** and the language.

To train the voice recognition of your device to your voice, select **Voice recognition > Voice recog. training**.

To activate a voice command for a function, select **Voice recognition > Voice commands**, a feature, and the function.  indicates that the voice command is activated.

To activate the voice command, select **Add**.

To play the activated voice command, select **Play**.

To use voice commands, see ["Voice dialling"](#), p. 20.

To manage voice commands, scroll to a function, select **Options** and from the following:

**Edit** or **Remove** — to rename or deactivate the voice command

**Add all** or **Remove all** — to activate or deactivate voice commands for all functions in the voice commands list

### Connect

Your phone provides several features to connect to other devices to transmit and receive data.

### Bluetooth wireless technology

Bluetooth technology allows you to connect your phone, using radio waves, to a compatible Bluetooth device within 10 metres (32 feet).


This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: SIM access, object push, file transfer, dial-up networking, headset, handsfree, generic access, serial port, generic object exchange, advanced audio distribution, audio video remote control, and generic audio/video distribution. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.

### Set up a Bluetooth connection

---

Select **Menu > Settings > Connectivity > Bluetooth**, and do the following:

- 1 Select **My phone's name**, and enter a name for your phone.
- 2 To activate Bluetooth connectivity, select **Bluetooth > On**.  indicates that Bluetooth connectivity is active.
- 3 To connect your phone to an audio accessory, select **Conn. to audio acc.** and the device that you want to connect to.

- 4 To pair your phone with any Bluetooth device in range, select **Paired devices > Add new device**.
- 5 Scroll to a found device, and select **Add**.
- 6 Enter a passcode (up to 16 characters) on your phone and allow the connection on the other Bluetooth device.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connectivity from sources you do not trust. Alternatively, switch off the Bluetooth function. This does not affect other functions of the device.

### **PC connection to the internet**

Use Bluetooth technology to connect your compatible PC to the internet without PC Suite software. Your phone must be able to connect to the internet (network service), and your PC must support Bluetooth technology. After connecting to the network access point (NAP) service of the phone, and pairing with your PC, your phone automatically opens a packet data connection to the internet.

### **Packet data**

General packet radio service (GPRS) is a network service that allows mobile phones to send and receive data over an internet protocol (IP)-based network.

To define how to use the service, select **Menu > Settings > Connectivity > Packet data > Packet data conn.** and from the following options:

**When needed** — to set the packet data connection to established when required by an application. The connection will be cut when the application is closed.

**Always online** — to automatically connect to a packet data network when you switch the phone on

You can use your phone as a modem by connecting it to a compatible PC using Bluetooth technology or a USB data cable. For details, see Nokia PC Suite documentation. [See "Nokia support", p. 37.](#)

### **USB data cable**

You can use the USB data cable to transfer data between the phone and a compatible PC or a printer supporting PictBridge.

To activate the phone for data transfer or image printing, connect the data cable and select the mode:

**PC Suite** — to use the cable for Nokia PC Suite

**Printing & media** — to use the phone with a PictBridge compatible printer or with a compatible PC

**Data storage** — to connect to a PC that does not have Nokia software and use the phone as data storage

To change the USB mode, select **Menu > Settings > Connectivity > USB data cable** and the desired USB mode.

### **Synchronisation and backup**

Select **Menu > Settings > Sync and backup** and from the following:

**Phone switch** — Synchronise or copy selected data between your phone and another phone using Bluetooth technology.

**Create backup** — Create a backup of selected data.

**Restore backup** — Select a stored backup file, and restore it to the phone.

## 18 Make it your phone

---

Select **Options** > **Details** for information about the selected backup file.

**Data transfer** — Synchronise or copy selected data between your phone and another device, PC, or network server (network service).

### Connect a USB device

You can connect a USB storage (for example, a memory stick) to your device and browse in the file system and transfer files.

- 1 Connect a compatible adapter cable to the USB port of your device.
- 2 Connect the USB storage to the adapter cable.
- 3 Select **Menu** > **Gallery** and the USB device to browse.

**Note:** Not all USB storage devices are supported, depending on their power consumption.

### Network provider services

Your network provider provides several additional services you may want to use. For some of these services, charges may apply.

### Operator menu

Access a portal to services provided by your network operator. For more information, contact your network operator. The operator can update this menu with a service message.

### SIM services

Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

### Position log

The network may send you a position request (network service). To subscribe and agree upon the delivery of positioning information, contact your service provider.

To accept or reject the position request, select **Accept** or **Reject**. If you miss the request, the phone automatically accepts or rejects it according to what you have agreed with your network operator or service provider.

To view the information on the 10 most recent privacy notifications and requests, select **Menu** > **Log** > **Positioning** > **Position log**.

### Info messages, SIM messages, and service commands

---

You can receive messages on various topics from your service provider (network service). For more information, contact your service provider.

Select **Menu** > **Messaging** > **Info messages** and from the available options.

### Service commands

---

Service commands allow you to write and send service requests (USSD commands) to your service provider, such as activation commands for network services.

To write and send the service request, select **Menu** > **Messaging** > **Serv. commands**. For details, contact your service provider.

## SIM messages

SIM messages are specific text messages that are saved to your SIM card. You can copy or move those messages from the SIM to the phone memory, but not vice versa.

To read SIM messages, select **Menu > Messaging > Options > SIM messages**.

### Configuration

You can configure your phone with settings that are required for certain services. You may receive these settings as a configuration message from your service provider. [See "Configuration setting service", p. 39.](#)

Select **Menu > Settings > Configuration** and from the following:

**Default config. sett.** — to view the service providers saved in the phone, and to set a default service provider

**Act. def. in all apps.** — to activate the default configuration settings for supported applications

**Preferred access pt.** — to view the saved access points

**Connect to support** — to download the configuration settings from your service provider

**Device manager sett.** — to allow or prevent the phone from receiving software updates. This option may not be available, depending on your phone. [See "Software updates over the air", p. 38.](#)

**Personal config. sett.** — to manually add new personal accounts for various services, and to activate or delete them. To add a new personal account, select **Add, or Options > Add new**. Select the service type, and enter the required parameters. To activate a personal account, scroll to it, and select **Options > Activate**.

## Stay in touch

Learn how to make calls, write text, send messages, and use the e-mail functionality of your device.

### Make calls

#### Make a voice call

You can start a call in several ways:

#### Manual dialling

Enter the phone number, including the area code, and press the call key.

For international calls, press \* twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.

#### Repeat a call

To access the list of dialled numbers, press the call key once in the standby mode. Select a number or name, and press the call key.

#### Select a number from Contacts

Search for a name or phone number that you saved in Contacts.

#### Answer an incoming call

Press the call key.

#### End a call

Press the end key.

#### Mute the ringing tone

Select Silence.

#### Reject an incoming call

Press the end key.

#### Adjust the volume in a call

Press the volume key up or down.

### Dialling shortcuts

Assign a phone number to one of the number keys, 2-9. See "[Assign dialling shortcuts](#)", p. 15.

Use a dialling shortcut to make a call in one of the following ways:

- Press a number key, then the call key.
- If **Menu > Settings > Call > Speed dialling > On** is selected, press and hold a number key.

### Voice dialling

Make a phone call by saying the name that is saved in Contacts.

As voice commands are language-dependent, before voice dialling, you must select **Menu > Settings > Phone > Language settings > Phone language** and your language.

**Note:** Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

- 1 In the home screen mode, press and hold the right selection key. A short tone sounds, and **Speak after the tone** is displayed.
- 2 Say the name of the contact you want to dial. If the voice recognition is successful, a list with matches is shown. The phone plays the voice command of the first match on the list. If it is not the correct command, scroll to another entry.

### Options during a call

Many of the options that you can use during a call are network services. For availability, contact your service provider.

During a call, select **Options** and from the available options.

Some of the network options are **Hold**, **New call**, **Add to conference**, **End all calls**, and the following:

**Send DTMF** — to send tone strings

**Swap** — to switch between the active call and the call on hold

**Transfer** — to connect a call on hold to an active call and disconnect yourself

**Conference** — to make a conference call

**Private call** — to have a private discussion in a conference call

### Warning:

Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

### Voice messages

The voice mailbox is a network service to which you may need to subscribe. For more information, contact your service provider.

### Call your voice mailbox

Press and hold **1**.

### Edit your voice mailbox number

Select **Menu > Messaging > Voice messages > Voice mailbox no..**

### Call log

To view the information on your calls, messages, data, and synchronisation, select **Menu > Log** and from the available options.

**Note:** The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

## Call

Select **Menu > Settings > Call** and from the following:

**Call divert** — to divert your incoming calls (network service). You may not be able to divert your calls if some call barring functions are active. See "Security", p. 14.

**Anykey answer** — to answer an incoming call by briefly pressing any key, except the power key, the left and right selection keys, or the end key

**Automatic redial** — to automatically redial the number if a call fails. The phone tries to call the number 10 times.

**Voice clarity** — to enhance speech intelligibility, especially in noisy environments

**Speed dialling** — to dial the names and phone numbers assigned to the number keys (2-9) by pressing and holding the corresponding number key

**Call waiting** — to have the network notify you of an incoming call while you have a call in progress (network service)

**Call duration display** — to display the duration of the call in progress

**Summary after call** — to briefly display the approximate duration after each call

**Send my caller ID** — to show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select **Set by network**.

**Outgoing call line** — to select the phone line for making calls, if your SIM card supports multiple phone lines (network service)



## Text and messages

Write text, and create messages and notes.

## Write text

### Text modes

To enter text (for example, when writing messages) you can use traditional or predictive text input.

When you write text, press and hold **Options** to switch between traditional text input, indicated by , and predictive text input, indicated by . Not all languages are supported by predictive text input.

The character cases are indicated by **Abc**, **abc**, and **ABC**.

To change the character case, press **#**. To change from the letter to number mode, indicated by **123**, press and hold **#**, and select **Number mode**. To change from the number to the letter mode, press and hold **#**.

To set the writing language, select **Options > Writing language**.

### Traditional text input

Press a number key, 2-9, repeatedly until the desired character appears. The available characters depend on the selected writing language.

If the next letter you want is located on the same key as the present one, wait until the cursor appears, and enter the letter.

To access the most common punctuation marks and special characters, press **1** repeatedly. To access the list of special characters, press **\***. To insert a space, press **0**.

### Predictive text input

Predictive text input is based on a built-in dictionary to which you can also add new words.

## 22 Stay in touch

---

- 1 Start writing a word, using the keys **2 to 9**. Press each key only once for one letter.
- 2 To confirm a word, scroll right or add a space.
  - If the word is not correct, press **\*** repeatedly, and select the word from the list.
  - If the **?** character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Enter the word using traditional text input, and select **Save**.
  - To write compound words, enter the first part of the word, and scroll right to confirm it. Write the last part of the word, and confirm the word.
- 3 Start writing the next word.

### Text and multimedia messages

You can create a message and optionally attach, for example, a picture. Your phone automatically changes a text message to a multimedia message when a file is attached.

### Text messages

---

Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents or other marks, and characters from some language options, take up more space, and limit the number of characters that can be sent in a single message.

The total number of characters left and the number of messages needed for sending are displayed.

To send messages, the correct message centre number must be stored in your device. Normally, this number is set by default through your SIM card. To set the number manually, select **Menu > Messaging > Message settings > Text messages > Message centres > Add centre**, and enter a name and the number from the service provider.

### Multimedia messages

---

A multimedia message can contain text, pictures, and sound or video clips.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit the device may make it smaller so that it can be sent by MMS.

**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

For availability and subscription to the multimedia messaging service (MMS), contact your service provider. You may also download the configuration settings. [See "Nokia support", p. 37.](#)

### Create a text or multimedia message

---

- 1 Select **Menu > Messaging > Create message > Message**.
- 2 To add recipients, scroll to the **To:** field, and enter the recipient's number or e-mail address, or select **Add** to select recipients from the available options. Select **Options** to add recipients and subjects and to set sending options.

- 3 Scroll to the **Text:** field, and enter the message text.
- 4 To attach content to the message, scroll to the attachment bar at the bottom of the display and select the desired type of content.
- 5 To send the message, press **Send**.

The message type is indicated at the top of the display and changes automatically depending on the content of the message.

Service providers may charge differently depending on the message type. Check with your service provider for details.

### **Read a message and reply**

**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Your phone issues a notification when you receive a message. Select **View** to display the message. If more than one message was received, to display a message, select the message from the **Inbox** and **Open**. Use the scroll key to view all parts of the message.

To create an answer message, select **Reply**.

### **Send and organise messages**

To send a message, select **Send**. The phone saves the message in the **Outbox** folder, and the sending starts.

**Note:** The message sent icon or text on your device screen does not indicate that the message is received at the intended destination.

If message sending is interrupted, the phone tries to resend the message a few times. If these attempts fail, the message remains in the **Outbox** folder. To cancel

message sending, in the **Outbox** folder, select **Options** > **Cancel sending**.

To save the sent messages in the **Sent items** folder, select **Menu** > **Messaging** > **Message settings** > **General settings** > **Save sent messages**.

The phone saves received messages in the **Inbox** folder. Organise your messages in the **Saved items** folder.

To add, rename, or delete a folder, select **Menu** > **Messaging** > **Saved items** > **Options**.

### **Flash messages**

Flash messages are text messages that are instantly displayed upon reception.

- 1 To write a flash message, select **Menu** > **Messaging** > **Create message** > **Flash message**.
- 2 Enter the recipient's phone number, write your message (maximum 70 characters), and select **Send**.

### **Instant messaging**

With instant messaging (IM, network service) you can send short text messages to online users. You must subscribe to a service and register with the IM service you want to use. Check the availability of this service, pricing, and instructions with your service provider. The menus may vary depending on your IM provider.

To connect to the service, select **Menu** > **Messaging** > **IMs** and follow the instructions on the display.

### **Nokia Xpress audio messages**

Create and send an audio message using MMS in a convenient way.

## 24 Stay in touch

- 1 Select **Menu > Messaging > Create message > Audio message**. The voice recorder opens.
- 2 Record your message. [See "Voice recorder", p. 29.](#)
- 3 Enter one or more phone numbers in the **To:** field, or select **Add** to retrieve a number.
- 4 To send the message, select **Send**.

### Message settings

Select **Menu > Messaging > Message settings** and from the following:

**General settings** — to save copies of sent messages in your phone, to overwrite old messages if the message memory becomes full, and to set up other preferences related to messages

**Text messages** — to allow delivery reports, to set up message centres for SMS and SMS e-mail, to select the type of character support, and to set up other preferences related to text messages

**Multimedia messages** — to allow delivery reports, to set up the appearance of multimedia messages, to allow the reception of multimedia messages and advertisements, and to set up other preferences related to multimedia messages

**E-mail messages** — to allow e-mail reception, to set the image size in e-mail, and to set up other preferences related to e-mail

**Service messages** — to activate service messages and to set up preferences related to service messages

### E-mail

Access your POP3 or IMAP4 e-mail account with your phone to read, write, and send e-mail. This e-mail application is different from the SMS e-mail function.

Before you can use e-mail, you must have an e-mail account and the correct settings. For availability and the correct settings, contact your e-mail service provider. You may receive the e-mail configuration settings as a configuration message. [See "Configuration setting service", p. 39.](#)

### E-mail setup wizard

The e-mail setup wizard starts automatically if no e-mail settings are defined in the phone. To start the setup wizard for an additional e-mail account, select **Menu > Messaging** and the existing e-mail account. Select **Options > Add mailbox** to start the e-mail setup wizard. Follow the instructions on the display.

### Write and send an e-mail

You may write your e-mail before connecting to the e-mail service.

- 1 Select **Menu > Messaging > Create message > E-mail message**.
- 2 Enter the recipient's e-mail address, the subject, and the e-mail message. To attach a file, select **Options > Insert** and from the available options.
- 3 If more than one e-mail account is defined, select the account from which you want to send the e-mail.
- 4 To send the e-mail, select **Send**.

### Read an e-mail and reply

**Important:** Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

- 1 To download e-mail message headers, select **Menu > Messaging** and your e-mail account.
- 2 To download an e-mail and its attachments, select the e-mail and **Open** or **Retrieve**.

- 3 To reply to or forward the e-mail, select **Options** and from the available options.
- 4 To disconnect from your e-mail account, select **Options** > **Disconnect**. The connection to the e-mail account automatically ends after some time without activity.

### New e-mail notifications

Your phone can automatically check your e-mail account in time intervals and issue a notification when new e-mail is received.

- 1 Select **Menu** > **Messaging** > **Message settings** > **E-mail messages** > **Edit mailboxes**.
- 2 Select your e-mail account, **Downloading sett.**, and the following options:

**Mailbox upd. interval** — to set how often your phone checks your e-mail account for new e-mail

**Automatic retrieval** — to retrieve new e-mail automatically from your e-mail account

- 3 To enable the new e-mail notification, select **Menu** > **Messaging** > **Message settings** > **E-mail messages** > **New e-mail notif.** > **On**.

## Image and video

### Capture an image

#### Activate the still camera

Select **Menu** > **Media** > **Camera**; or, if the video function is on, scroll left or right.

#### Zooming

In the camera mode, scroll up and down, or press the volume keys.

### Capture an image

Select **Capture**. The phone saves the images on the memory card, if available, or in the phone memory.

Select **Options** > **Flash** > **Flash on** to capture all images with camera flash, or **Automatic** to activate the flash automatically when the light conditions are dim.

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

To display an image immediately after you take it, select **Options** > **Settings** > **Image preview time** and the preview time. During the preview time, select **Back** to capture another image, or **Send** to send the image as a multimedia message.

Your device supports an image capture resolution of up to 1536x2048 pixels.

### Record a video clip

#### Activate video function

Select **Menu** > **Media** > **Video**, or, if the camera function is on, scroll left or right.

### Video recording

To start recording, select **Record**; to pause recording, select **Pause**; to resume recording, select **Continue**; to stop recording, select **Stop**.

The phone saves the video clips on the memory card, if available, or in the phone memory.

### Camera and video options

In the camera or video mode, select **Options** and from the following:

**Effects** — Apply different effects (for example, greyscale and false colour) to the captured image.

**White balance** — Adapt the camera to the current light conditions.

**Settings** — Change other camera and video settings, and select the image and video storage.

### Gallery

Manage images, video clips, music files, themes, graphics, tones, recordings, and received files. These files are stored in the phone memory or on a memory card and may be arranged in folders.

### Folders and files

- 1 To view the list of folders, select **Menu > Gallery**.
- 2 To view the list of files in a folder, select a folder and **Open**.
- 3 To view the folders of the memory card when moving a file, scroll to the memory card, and press the scroll key right.

### Print images

Your phone supports Nokia XpressPrint to print images that are in the jpeg format.

- 1 To connect your phone to a compatible printer, use a data cable or send the image by Bluetooth to a printer supporting Bluetooth technology. See "[Bluetooth wireless technology](#)", p. 16.
- 2 Select the image you want to print and **Options > Print**.

### Share images and videos online

Share images and video clips in compatible online sharing services on the web.

To use online sharing, you must subscribe to an online sharing service (network service).

To upload an image or a video clip to an online sharing service, select the file from **Gallery, Options > Send > Upload to web**, and an online sharing service.

For more information on online sharing and compatible service providers, see the Nokia product support pages or your local Nokia website.

You can view uploads on the internet pages of the online sharing service on your device. See "[Web uploads](#)", p. 30.

### Memory card

Use a memory card to store your multimedia files, such as video clips, songs, sound files, images, and messaging data.

Some of the folders in Gallery with content used by the phone (for example, Themes) may be stored on the memory card.

### Format the memory card

Some supplied memory cards are pre-formatted; others require formatting. When you format a memory card, all data on the card is permanently lost.

- 1 To format a memory card, select **Menu > Gallery or Applications**, the memory card folder, and **Options > Format memory card > Yes**.
- 2 When formatting is complete, enter a name for the memory card.

### Lock the memory card

---

To set a password (maximum 8 characters) to lock your memory card against unauthorised use, select the memory card folder and **Options > Set password**.

The password is stored in your phone, and you do not have to enter it again while you are using the memory card in the same phone. If you want to use the memory card in another device, you are asked for the password.

To remove the password, select **Options > Delete password**.

### Check memory consumption

---

To check the memory consumption of different data groups and the available memory to install new software to your memory card, select the memory card and **Options > Details**.

## Entertainment

### Listen to music

Listen to music with the music player or radio, and record sounds or voice with the voice recorder. Download music from the internet, or transfer music from your PC.

### Media player

Your phone includes a media player for listening to songs and viewing video clips. Music and video files stored in the music folder in the phone memory or on the memory card are automatically detected and added to the music library.

To open the media player, select **Menu > Media > Media player**.

### Music menu

---

Access your music and video files stored in the phone memory or on the memory card, download music or video clips from the web, or view compatible video streams from a network server (network service).

To listen to music or play a video clip, select a file from the available folders and **Play**.

To download files from the web, select **Options > Downloads** and a download site.

To update the music library after you have added files, select **Options > Update library**.

### Create a playlist

---

To create a playlist with your music selection:

- 1 Select **Playlists > Create playlist**, and enter the name of the playlist.
- 2 Add music or video clips from the displayed lists.

3 Select **Done** to store the playlist.

### **Configure a streaming service**

---

You may receive the streaming settings as a configuration message from the service provider. [See "Configuration setting service", p. 39.](#) You can also enter the settings manually. [See "Configuration", p. 19.](#)

To activate the settings:

- 1 Select **Options** > **Downloads** > **Streaming settings** > **Configuration**.
- 2 Select a service provider, **Default**, or **Personal config.** for streaming.
- 3 Select **Account** and a streaming service account from the active configuration settings.

### **Play songs**

---

#### **Warning:**

Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

To adjust the volume level, press the volume keys.

Operate the player with the virtual keys on the display.

To start playing, select ▶.

To pause playing, select ||.

To skip to the next song, select ►►|. To skip to the beginning of the previous song, select ◀◀| twice.

To fast-forward the current song, select and hold ►►|. To rewind the current song,

select and hold ◀◀|. Release the key at the position you want to continue the music playback.

To switch to the music menu, select ≡.

To switch to the current playlist, select (••).

To close the media player menu, and to continue music playback in the background, press the end key.

To stop the media player, press and hold the end key.

### **Change the media player look**

---

Your phone provides several themes to change the look of the media player.

Select **Menu** > **Media** > **Media player** > **Go to Media player** > **Options** > **Settings** > **Media player theme** and one of the listed themes. The virtual keys may change depending on the theme.

### **Radio**

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or accessory needs to be attached to the device for the FM radio to function properly.

#### **Warning:**

Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Select **Menu** > **Media** > **Radio**.

To adjust the volume, use the volume keys.

**Use the graphical keys on the display**

Scroll up, down, left, or right.

**Close the radio menu**

Briefly press the end key. The radio continues playing in the background.

**Switch the radio off**

Press and hold the end key.

**Tune radio stations**

- 1 To start the search, press and hold the scroll key left or right. To change the radio frequency in 0.05 MHz steps, briefly press the scroll key left or right.
- 2 To save a station to a memory location, select **Options** > **Save station**.
- 3 To enter the name of the radio station, select **Options** > **Stations** > **Options** > **Rename**.

Select **Options** and from the following:

**Search all stations** — to automatically search for the available stations at your location

**Set frequency** — to enter the frequency of the desired radio station

**Stations** — to list and rename or delete saved stations

**Change stations**

Scroll up or down, or press the number keys corresponding to the number of the station in the station list.

**Radio settings**

Select **Options** > **Settings** and from the following:

**RDS** — to select whether to display information from the radio data system

**Auto-frequency** — to enable the automatic switch to a frequency with the best reception of the tuned in station (available when RDS is activated)



 
**Play via** — to select the headset or the loudspeaker

**Output** — to switch between stereo and mono output




**Radio theme** — to select a radio theme

**Voice recorder**

Record speech, sound, or an active call, and save them in **Gallery**.

 Select **Menu** > **Media** > **Voice recorder**. To use the graphical keys , , or  on the display, scroll left or right.

**Record sound**

- 1 Select , or, during a call, select **Options** > **Record**. While recording a call, all parties to the call hear a faint beeping. To pause the recording, select .
- 2 To end the recording, select . The recording is saved in the Recordings folder in **Gallery**.

Select **Options** to play or send the last recording, to access the list of recordings, or to select the memory and the folder to store the recordings.

**Equaliser**

Adjust the sound when using the music player.

Select **Menu** > **Media** > **Equaliser**.

To activate a predefined equaliser set, scroll to one of the sets, and select **Activate**.

### Create a new equaliser set

---

- 1 Select one of the last two sets in the list and **Options** > **Edit**.
- 2 Scroll left or right to access the virtual sliders and up or down to adjust the slider.
- 3 To save the settings and create a name for the set, select **Save** and **Options** > **Rename**.

### Stereo widening

Stereo widening creates a wider stereo sound effect when you are using a stereo headset.

To activate, select **Menu** > **Media** > **Stereo widening**.

### Web

You can access various internet services with your phone browser. The appearance of the internet pages may vary due to screen size. You may not be able to see all the details on the internet pages.

**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

For the availability of these services, pricing, and instructions, contact your service provider.

You may receive the configuration settings required for browsing as a configuration message from your service provider.

To set up the service, select **Menu** > **Web** > **Web settings** > **Configuration sett.**, a configuration, and an account.

### Connect to a service

To make a connection to the service, select **Menu** > **Web** > **Home**; or in the standby mode, press and hold **0**.

To select a bookmark, select **Menu** > **Web** > **Bookmarks**.

To select the last visited URL, select **Menu** > **Web** > **Last web addr.**

To enter the address of a service, select **Menu** > **Web** > **Go to address**. Enter the address, and select **OK**.

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

### Web uploads

Open the web page of your online sharing service to view uploaded images and videos and to change settings (network service).

### Open an online sharing service

---

- 1 Select **Menu** > **Web** > **Web uploads** and an online sharing service.
- 2 Select from the links offered by the service.

### Change settings of an online sharing service

---

- 1 Select **Menu** > **Web** > **Web uploads** and an online sharing service.
- 2 Select **Options** > **Settings** to open the settings page of the service.

### Appearance settings

While browsing the web, select **Options** > **Settings** and from the following:

**Display** — Select the font size, whether images are shown, and how the text is displayed.

**General** — Select whether web addresses are sent as Unicode (UTF-8), the encoding type for the contents, and whether JavaScript™ is enabled.

The available options may vary.

### Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache.

A cookie is data that a site saves in the cache memory of your phone. Cookies are saved until you clear the cache memory.

To clear the cache while browsing, select **Options > Tools > Clear the cache**.

To allow or prevent the phone from receiving cookies, select **Menu > Web > Web settings > Security > Cookies**; or, while browsing, select **Options > Settings > Security > Cookies**.

### Browser security

Security features may be required for some services, such as banking services or online shopping. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

To view or change the security module settings, or to view a list of authority or user certificates downloaded to your phone, select **Menu > Settings > Security > Security module sett., Authority certificates, or User certificates**.

**Important:** Even if the use of certificates makes the risks involved in remote

connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If "Expired certificate" or "Certificate not valid yet" is shown, even if the certificate should be valid, check that the current date and time in your device are correct.

### Games and applications

You can manage applications and games. Your phone may have some games or applications installed. These files are stored in the phone memory or an attached memory card and may be arranged in folders.

### Launch an application

Select **Menu > Applications > Games, Memory card, or Collection**. Scroll to a game or an application, and select **Open**.

To set sounds, lights, and shakes for a game, select **Menu > Applications > Options > Application settings**.

Other available options may include the following:

**Update version** — to verify that a new version of the application is available for download from the web (network service)

**Web page** — to provide further information or additional data for the application from an internet page (network service), if available

**Application access** — to restrict the application from accessing the network

### Download an application

Your phone supports J2ME™ Java applications. Ensure that the application is compatible with your phone before downloading it.

**Important:** Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

You can download new applications and games in different ways.

- Select **Menu > Applications > Options > Downloads > App. downloads** or **Game downloads**; the list of available bookmarks is shown.
- Use the Nokia Application Installer from PC Suite to download the applications to your phone.

For the availability of different services and pricing, contact your service provider.

### Maps

You can browse maps for different cities and countries, search for addresses and points of interest, plan routes from one location to another, save locations as landmarks, and send them to compatible devices.

Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device.

To use the Maps application, select **Menu > Organiser > Maps** and from the available options.

### Download maps

Your phone may contain pre-installed maps on the memory card. You can download a new set of maps through the internet using the Nokia Map Loader PC software.

### Nokia Map Loader

---

To download the Nokia Map Loader on your PC and for further instructions, see [www.maps.nokia.com](http://www.maps.nokia.com).

Before you download new maps for the first time, ensure that you have a memory card inserted in the phone.

Select **Menu > Organiser > Maps** to do an initial configuration.

To change the selection of maps on your memory card, use the Nokia Map Loader to delete all maps on the memory card and download a new selection, to ensure that all maps are from the same release.

## Network map service

You can set your phone to automatically download maps that you do not have in your phone when needed.

Select **Menu > Organiser > Maps > Settings > Network settings > Allow network usage > Yes** or **In home network**.

To prevent automatic download of maps, select **No**.

**Note:** Downloading maps may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

## Maps and GPS

You can use the Global Positioning System (GPS) to support the Maps application. Find out your location, or measure distances and plot coordinates.

Before you can use the GPS function with your phone, you must pair your phone with a compatible external GPS receiver using Bluetooth wireless technology. For more information, see the user guide for your GPS device.

After pairing the Bluetooth GPS device with the phone, it may take several minutes for the phone to display the current location. Subsequent connections should be faster, but if you have not used GPS for several days, or are very far away from the last place you used it, it may take several minutes to detect and display your location.

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The accuracy of location data can be affected by

adjustments to GPS satellites made by the United States government and is subject to change with the United States Department of Defense civil GPS policy and the Federal Radionavigation Plan. Accuracy can also be affected by poor satellite geometry. Availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. The GPS receiver should only be used outdoors to allow reception of GPS signals.

Any GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

## Extra services

You can upgrade Maps with a full voice-guided navigation, which requires a regional licence.

To use this service, you need a compatible external GPS device that supports Bluetooth wireless technology.

To purchase a navigation service with voice guidance, select **Menu > Maps > Extra services > Purchase navigation**, and follow the instructions.

To use navigation with voice guidance, you must allow the Maps application to use a network connection.

The navigation licence is connected to your SIM card. If you insert another SIM card in your phone, you are asked to purchase a licence when starting navigation. During the purchase procedure, you are offered to transfer the existing navigation licence to the new SIM card without extra charge.

### Organise

Let your phone help you to organise your life.


#### Manage contacts

Save names, phone numbers, and addresses as contacts in the phone and on the SIM card.

Select **Menu** > **Contacts**.

#### Select the memory for contacts

The phone memory can save contacts with additional details, such as various phone numbers and text items. You can also save an image, a tone, or a video clip for a limited number of contacts.

The SIM card memory can save names with one phone number attached to them. The contacts saved in the SIM card memory are indicated by .

- 1 Select **Settings** > **Memory in use** to select the SIM card, the phone memory, or both for your contacts.
- 2 Select **Phone and SIM** to recall contacts from both memories. When you save contacts, they are saved in the phone memory.

#### Handle contacts

##### Search for a contact

Select **Menu** > **Contacts** > **Names**.

Scroll through the list of contacts, or enter the first characters of the contact's name.

##### Save a name and phone number

Select **Menu** > **Contacts** > **Add new**.

##### Add and edit details

Select a contact and **Details** > **Options** > **Add detail**.

##### Delete a detail

Select a contact and **Details**. Select a detail and **Options** > **Delete**.

##### Delete a contact

Select a contact and **Options** > **Delete contact**.

##### Delete all contacts

Select **Menu** > **Contacts** > **Del. all contacts** > **From phone memory** or **From SIM card**.

#### Copy or move contacts between the phone and SIM card memories

##### Copy single contacts

Select **Options** > **Mark** > **Mark**. Mark the contacts you want to copy or move, and select **Options** > **Copy marked** or **Move marked**.

##### Copy all contacts

Select **Menu** > **Contacts** > **Copy contacts** or **Move contacts**.

#### Create a contact group

Arrange contacts into caller groups with different ringing tones and group images.

- 1 Select **Menu** > **Contacts** > **Groups**.
- 2 Select **Add** or **Options** > **Add new group** to create a new group.
- 3 Enter the group name, optionally select an image and a ringing tone, and select **Save**.
- 4 Select the group and **View** > **Add** to add contacts to the group.

#### Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard.

To send a business card, search for the contact, and select **Details > Options > Send business card**.

When you receive a business card, select **Show > Save** to save the business card in the phone memory.

### Date and time

To change the clock type, time, time zone, or date, select **Menu > Settings > Date and time**.

When travelling to a different time zone, select **Menu > Settings > Date and time > Date & time settings > Time zone**; and scroll left or right to select the time zone of your location. The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages.

For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich, London (UK).

### Alarm clock

To sound an alarm at a desired time.

#### Set the alarm

- 1 Select **Menu > Organiser > Alarm clock**.
- 2 Set the alarm on, and enter the alarm time.
- 3 To issue an alarm on selected days of the week, select **Repeat: > On** and the days.
- 4 Select the alarm tone. If you select the radio as the alarm tone, connect the headset to the phone.
- 5 Set the snooze time-out, and select **Save**.

### Stop the alarm

To stop the sounding alarm, select **Stop**. If you let the alarm sound for a minute or select **Snooze**, the alarm stops for the snooze time-out, then resumes.

### Calendar

Select **Menu > Organiser > Calendar**.

The current day is framed. If there are any notes set for the day, the day is in bold type. To view the day notes, select **View**. To view a week, select **Options > Week view**. To delete all notes in the calendar, select **Options > Delete notes > All notes**.

To edit settings related to date and time, select **Options > Settings** and from the available options. To delete old notes automatically after a specified time, select **Options > Settings > Auto-delete notes** and from the available options.

### Make a calendar note

Scroll to the date, and select **Options > Make a note**. Select the note type, and fill in the fields.

### To-do list

To create a note for a task that you must do, select **Menu > Organiser > To-do list**.

To create a note if no note is added, select **Add**; otherwise, select **Options > Add**. Fill in the fields, and select **Save**.

To view a note, scroll to it, and select **View**.

### Notes

To write and send notes, select **Menu > Organiser > Notes**.

## 36 Organise

---

To make a note if no note is added, select **Add**; otherwise, select **Options** > **Make a note**. Write the note, and select **Save**.

### Nokia PC Suite

With Nokia PC Suite, you can manage your music, synchronise contacts, calendar, notes, and to-do notes between your phone and a compatible PC or a remote internet server (network service). You may find more information and PC Suite on the Nokia website. See "[Nokia support](#)", p. 37.

### Calculator

Your phone provides a standard, a scientific, and a loan calculator.

Select **Menu** > **Organiser** > **Calculator** and, from the available options, the calculator type and the operating instructions.

This calculator has limited accuracy and is designed for simple calculations.

### Countdown timer

#### Normal timer

- 1 To activate the timer, select **Menu** > **Organiser** > **Countd. timer** > **Normal timer**, enter a time, and write a note that is displayed when the time expires. To change the time, select **Change time**.
- 2 To start the timer, select **Start**.
- 3 To stop the timer, select **Stop timer**.

#### Interval timer

- 1 To have an interval timer with up to 10 intervals started, first enter the intervals.
- 2 Select **Menu** > **Organiser** > **Countd. timer** > **Interval timer**.
- 3 To start the timer, select **Start timer** > **Start**.

To select how the interval timer should start the next period, select **Menu** > **Organiser** > **Countd. timer** > **Settings** > **Contin. to next period** and from the available options.

### Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch.

Select **Menu** > **Organiser** > **Stopwatch** and from the following options:

**Split timing** — to take intermediate times. To reset the time without saving it, select **Options** > **Reset**.

**Lap timing** — to take lap times

**Continue** — to view the timing that you have set in the background

**Show last** — to view the most recently measured time if the stopwatch is not reset

**View times** or **Delete times** — to view or delete the saved times

To set the stopwatch timing in the background, press the end key.

## Support and updates

Nokia helps you in many ways to gain the most benefit from your phone.

### Helpful hints

If you have queries about your phone, or you are unsure how your phone should function, see the user guide. If this does not help, try the following:

#### Reset the phone

Switch off the phone, and remove the battery.

After a few seconds, insert the battery, and switch on the phone.

#### Restore the factory settings

See ["Restore factory settings", p. 39.](#)

#### Update your phone software

See ["Update device software", p. 38.](#)

#### Get more information

See a Nokia website, or contact Nokia Care. See ["Nokia support", p. 37.](#)

If a query remains unresolved, contact your local Nokia Care point for repair options. Before sending your phone for repair, always back up or make a record of data in your phone.

### Nokia support

Check [www.nokia.com/support](http://www.nokia.com/support) or your local Nokia website for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

### Configuration settings service

Download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at [www.nokia.com/support](http://www.nokia.com/support).

### Nokia PC Suite

You may find PC Suite and related information on the Nokia website at [www.nokia.com/support](http://www.nokia.com/support).

### Nokia Care services

## NOKIA Care

If you need to contact Nokia Care services, check the list of local Nokia Care contact centres at [www.nokia.com/customerservice](http://www.nokia.com/customerservice).

### Maintenance

For maintenance services, check your nearest Nokia Care point at [www.nokia.com/repair](http://www.nokia.com/repair).

### My Nokia

Receive free tips, tricks, and support for your Nokia phone, plus free trial content, interactive demonstrations, a personalised web page, and news about the latest Nokia products and services.

Get the most out of your Nokia phone and register to My Nokia today! For more information and availability in your region, see [www.nokia.com/mynokia](http://www.nokia.com/mynokia).

### Download content

You may be able to download new content (for example, themes) to your phone (network service).

**Important:** Use only services that you trust and that offer adequate security and protection against harmful software.

For the availability of different services and pricing, contact your service provider.

### Update device software

Software updates may include new features and enhanced functions that were not available at the time of purchase of your device. Updating the software may also improve the device performance.

Nokia Software Updater is a PC application that enables you to update your device software. To update your device software, you need a compatible PC, broadband internet access, and a compatible USB data cable to connect your device to the PC.

To get more information, to check the release notes for the latest software versions, and to download the Nokia Software Updater application, see [www.nokia.com/softwareupdate](http://www.nokia.com/softwareupdate) or your local Nokia website.

To update the device software, do the following:

- 1 Download and install the Nokia Software Updater application to your PC.
- 2 Connect your device to the PC using a USB data cable, and start the Nokia Software Updater application. The Nokia Software Updater application guides you to back up your files, update the software, and restore your files.

### Software updates over the air

Your service provider may send phone software updates over the air directly to your phone (network service). This option may not be available, depending on your phone.

Downloading software updates may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for

information about data transmission charges.

Make sure that the device battery has enough power, or connect the charger before starting the update.

#### Warning:

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Be sure to back up data before accepting installation of an update.

### Software update settings

---

This option may not be available, depending on your phone.

To allow or disallow software and configuration updates, select **Menu > Settings > Configuration > Device manager sett. > Serv. softw. updates.**

### Request a software update

---

- 1 Select **Menu > Settings > Phone > Phone updates** to request available software updates from your service provider.
- 2 Select **Current softw. details** to display the current software version and check whether an update is needed.
- 3 Select **Downl. phone softw.** to download and install a software update. Follow the instructions on the display.
- 4 If the installation was cancelled after the download, select **Install softw. update** to start the installation.

The software update may take several minutes. If there are problems with the installation, contact your service provider.

### Configuration setting service

To use some of the network services, such as mobile internet services, the multimedia messaging service (MMS), Nokia Xpress audio messaging, or remote internet server synchronisation, your phone needs the correct configuration settings. For more information on availability, contact your service provider or the nearest authorised Nokia dealer, or see the support pages on the Nokia website. [See "Nokia support", p. 37.](#)

When you have received the settings as a configuration message and the settings are not automatically saved and activated, **Configuration settings received** is displayed.

To save the settings, select **Show** > **Save**. If required, enter the PIN code supplied by the service provider.

### Restore factory settings

To restore the phone back to factory conditions, select **Menu** > **Settings** > **Rest. factory sett.** and from the following:

**Restore settings only** — Reset all preference settings without deleting any personal data.

**Restore all** — Reset all preference settings and delete all personal data, such as contacts, messages, media files, and activation keys.

### Accessories

#### Warning:

Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

#### Battery

##### Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BL-5CT. Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-8. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device. Use of an unapproved battery or charger may present a risk of fire, explosion, leakage, or other hazard.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Always switch the device off and disconnect the charger before removing the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the

battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, deform, puncture, or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of such a leak, flush your skin or eyes immediately with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids.

Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

#### Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps:

Successful completion of the steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic, original Nokia battery, you should refrain from using it, and take it to the nearest Nokia authorised service centre or dealer for assistance. If authenticity cannot be verified, return the battery to the place of purchase.

#### Authenticate hologram

- 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



- 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.



### What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest Nokia authorised service centre or dealer for assistance. The use of a battery that is not approved by Nokia may be dangerous and may result in poor performance and damage to your device and its accessories. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, see [www.nokia.com/battery](http://www.nokia.com/battery).

### Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any accessory. If any device is not working properly, take it to the nearest authorised service facility for service.

### Recycle

Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organisations, or your local Nokia representative. Check how to recycle your Nokia products at [www.nokia.com/werecycle](http://www.nokia.com/werecycle), or if browsing on a mobile device, [www.nokia.mobi/werecycle](http://www.nokia.mobi/werecycle).



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco-Declarations at [www.nokia.com/environment](http://www.nokia.com/environment).

### Additional safety information

#### Small children

Your device and its accessories may contain small parts. Keep them out of the reach of small children.

#### Operating environment

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 centimetres (5/8 inch) away from the body. When a carry case, belt clip, or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until

## 42 Additional safety information

such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

### Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### Implanted medical devices

Manufacturers of medical devices recommend that a minimum separation of 15.3 centimetres (6 inches) should be maintained between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device when the wireless device is turned on.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device to minimise the potential for interference.
- Turn the wireless device off immediately if there is any reason to suspect that interference is taking place.
- Read and follow the directions from the manufacturer of their implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating

properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

### Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

### Emergency calls

**Important:** This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device will attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
  - Insert a SIM card if your device uses one.
  - Remove certain call restrictions you have activated in your device.
  - Change your profile from offline or flight profile mode to an active profile.

- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 4 Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

**Certification information (SAR)****This mobile device meets guidelines for exposure to radio waves.**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.15 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at [www.nokia.com](http://www.nokia.com).

**Index****A**

access codes	10
anykey answer	21
applications	31

**B**

barring password	10
battery	7
battery charge status	11
browser	30
business cards	34

**C**

cache memory	31
calculator	36
call divert	21
call log	20
call waiting	21
caller id	21
camera	25, 26
capture an image	25
configuration	19
configuration setting service	39
contacts	
— memory	34
cookies	31

**D**

data cable	17
dialling shortcuts	15, 20
display	11, 15
downloads	37

**E**

e-mail	24
equaliser	29

**F**

factory settings	39
flash messages	23
flight mode	12

flight query	13
font size	15

**G**

games	31
general packet radio service	17
GPRS	17
GPS	33

**H**

handsfree	20
headset	8
help text	13
helpful hints	37
home screen	11, 15

**I**

IM	23
image	25
in-call timer	21
indicators	12
info messages	18
instant messaging	23
internet	30

**K**

keyguard	13
keypad lock	12
keys	6

**L**

language	13
lights	15
location information	18
loudspeaker	20

**M**

Maps	32
media player	27
memory card	7, 26
message centre number	22
message sending	23
microSD card	7
My Nokia	37

<b>N</b>		software updates	38
navigation	12	speed dialling	15, 20, 21
Nokia Care	37	start up tone	13
notes	35	status indicators	11
number mode	21	stereo widening	30
<b>O</b>		stopwatch	36
offline mode	12	strap	9
online sharing	30	<b>T</b>	
operator menu	18	text modes	21
<b>P</b>		themes	14
packet data	17	tones	15
parts	6	traditional text input	21
PC Suite	36	<b>U</b>	
phone software updates	13	updates	
PictBridge	17	— device software	38
picture	25	UPIN	10
PIN	10	USB data cable	17
position log	18	<b>V</b>	
power saver	15	video clips	25
predictive text input	21	voice clarity	21
print images	26	voice commands	16
profiles	14	voice dialling	20
PUK	10	voice recognition	16
<b>R</b>		voice recorder	29
radio	28	<b>W</b>	
recorder	29	wallpaper	15
redial	21	web	30
<b>S</b>		write text	21
scrolling	12		
security code	10		
security module	10		
service commands	18		
sharing	30		
shortcuts	11, 15		
signal strength	11		
SIM			
— services	18		
SIM card	6, 12		
SIM messages	18		
software update	38		

## DECLARATION OF CONFORMITY

# CE 0434

Hereby, NOKIA CORPORATION declares that this RM-443 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

© 2009 Nokia. All rights reserved.

Nokia, Nokia Connecting People and Navi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

US Patent No 5818437 and other pending patents. T9 text input software Copyright © 1997-2008. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details, and availability of language options.

#### Export controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Model number: 6303c

9214002/Issue 1 EN